


OWNER'S MANUAL

COMMERCIAL
THERMOSTAT
P/N P374-2800

HEAT & COOL HEAT PUMP

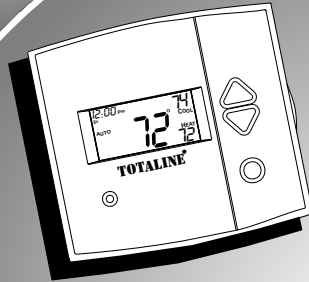

**7-DAY
PROGRAMMABLE**

**DIGITAL
THERMOSTAT**

- 3 Configurable Outputs
- Control up to 2 Cool & 3 Heat Stages
- Adjustable 2nd & 3rd Stage Timer & Deadbands
- Backlit Display & Button Legends
- Aux Heat Indicator
- Set Point Limiting
- Outdoor Sensor Ready with High/Low Readouts for the Day
- Accepts EZ Programmer™
- Accepts Optional Humidity Module: Controls Humidification and Dehumidification
- Accepts Optional IR Remote Control
- Optional Internet / Phone Control Accessory

Accepts the OPTIONAL HUMIDITY MODULE

- Use with most Air Conditioning & Heating Systems including: 1 or 2 Stage Electric Cooling & 3 Stage Gas Heating, Heat Pump, Electric or Hydronic Heat.

TOTALINE®

Signature

Commercial Systems & Services © Carrier Corporation 08/05

TOTALINE



CAUTION

 
Follow the Installation Instructions before proceeding.
Set the thermostat mode to "OFF" prior to changing settings in setup or restoring Factory Defaults.



CAUTION


NEVER PUT MORE THAN ONE JUMPER ON THE SAME MISC JUMPER BLOCK!

THIS MAY DAMAGE YOUR THERMOSTAT AND VOID YOUR WARRANTY.



NOTE: Due to variations in environmental conditions, it is not always possible to achieve the desired humidification or dehumidification setpoint.

 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



How to Use This Manual

TOTALINE

The Table of Contents divides the thermostat features into sections making it easier to quickly find information.

The first page of each section contains a more detailed Contents of each section, such as the example page shown below.

The diagram shows a page layout for Section 14. At the top is a black header bar with the text "SECTION 14 Timers and Deadbands" and a "TOTALINE" logo. Below the header is a table of contents titled "Section 14 Contents:". The table lists five items with their respective page numbers: "Adjusting the Heat/Cool Differential.....14.2", "Adjusting the Cycles Per Hour.....14.3", "Adjusting the Deadband.....14.4", "Adjusting the Minutes of Run-Time Before the Next Stage.....14.6", and "Selecting 2nd Stage Turn Off Temperature.....14.7". A small black box with the number "14" is positioned to the right of the "14.6" page number. At the bottom left of the page is the text "Page 14.1". Callout arrows point to various elements: "Header shows section # and title of section" points to the header bar; "Section contents" points to the table of contents; "Visible section tab on the side of the page" points to the "14" box; and "Section and page #" points to "Page 14.1".

SECTION 14
Timers and Deadbands **TOTALINE**

Section 14 Contents:

- *Adjusting the Heat/Cool Differential.....14.2*
- *Adjusting the Cycles Per Hour.....14.3*
- *Adjusting the Deadband.....14.4*
- *Adjusting the Minutes of Run-Time Before the Next Stage.....14.6*
- *Selecting 2nd Stage Turn Off Temperature.....14.7*

14

Page 14.1

Header shows section # and title of section

Section contents

Visible section tab on the side of the page

Section and page #

In addition, this manual also has an Index to help you find any information regarding this thermostat quickly.

Glossary of Terms

TOTALINE

Auto-Changeover: A mode in which the thermostat will turn on the heating or cooling based on room temperature demand.

Configurable Output Jumper: Using jumpers on the thermostat you can configure the MISC1, MISC2, and MISC3 terminals to operate with regards to humidification, dehumidification, 2nd stage cooling, and 3rd stage heating.

Cool Setpoint: The warmest temperature that the space should rise to before cooling is turned on (without regards to deadband).

Deadband: The number of degrees the thermostat will wait, once setpoint has been reached, before energizing heating or cooling.

Dehumidify: To reduce the amount of moisture in the air.

Differential: The forced temperature difference between the *heat setpoint* and the *cool setpoint*.

Heat Setpoint: The coolest temperature that the space should drop to before heating is turned on (without regards to deadband).

Humidify: To increase the amount of moisture in the air.

Icon: The word or symbol that appears on the thermostat display.

Mode: The current operating condition of the thermostat (i.e. Off, Heat, Cool, Auto, Program On).

Non-Programmable Thermostat: A thermostat that does not have the capability of running the *Time Period Programming*.

Programmable Thermostat: A thermostat that has the capability of running the *Time Period Programming*.

Temperature Swing: *Same as Deadband.*

Time Period Programming: A program that allows the thermostat to automatically adjust the *heat setpoint* and/or the *cool setpoint* based on the time of day.

Table of Contents

TOTALINE

Quick Start	1
Getting to Know Your Thermostat	2
Setting Clock and Day	3
Basic Operation	4
Viewing Temperature and Humidity Sensors	5
Programming the Daily Schedule	6
Programming the Fan Operation	7
Thermostat Display Options	8
Humidification	9
Dehumidification	10
Viewing Equipment Run-Times	11
Electric Heat and Heat Pump Operation	12
Timers and Deadbands	13
Energy Save Operation	14
Programming the Run-Time Alarms	15
Programming the Holiday Mode	16
Configuring the MISC Outputs	17
Factory Defaults, Calibration, and Sensors	18
Accessories	19
Advanced Setup Table	20

SECTION 1

Quick Start


TOTALINE

1

Section 1 Contents:

- ***Setting the Clock and Day.....1.2***
- ***Selecting the Heat or Cool
Mode.....1.3***
- ***Selecting Your Desired
Temperature.....1.4***
- ***Using the Fan Button.....1.4***


***Note:** Following the instructions in this section will allow you to operate your thermostat using the factory default settings. These settings are depicted in the illustrations throughout this manual.*

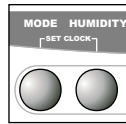

Press the **MODE** and **HUMIDITY** buttons at the same time

During Setup & Programming:
Pressing the **UP** or **DOWN** buttons will modify the flashing selection.


Setting the Clock

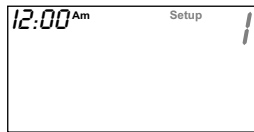




Setting the Day

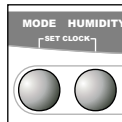

Press the **MODE** and **HUMIDITY** buttons at the same time to return to normal operation.



 
To adjust the Clock or Day use
Press    Buttons.

To adjust the time by hours press and hold the **FAN** button while pressing the **UP** or **DOWN** buttons.

1 *Selecting the Heat or Cool Mode*

Select Mode by Pressing the MODE Button

Heating Only
The **HEAT** setting indicates the temperature the room has to reach before the furnace will turn on to heat the room.




Cooling Only
The **COOL** setting indicates the temperature the room has to reach before the air conditioner will turn on to cool the room.




Heating or Cooling
AUTO will automatically select heat or cool based on room temperature demand.



Time Schedule for Heating or Cooling
Program On will activate the stored timer operation for the heating and cooling setpoints. (occupied or unoccupied periods)

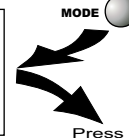

 
Off
OFF indicates both heating and air conditioning systems are turned off.



Selecting Your Desired Temperature
(adjusting the setpoints)

AUTO OR PROGRAM MODE

Pressing the UP or DOWN buttons in Auto or Program mode will adjust **both** the heat and cool set temperatures simultaneously.

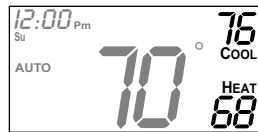

Adjust the desired set temperature with the



buttons.

HEAT OR COOL MODE

Pressing the UP or DOWN buttons in Heat or Cool mode will adjust only the heat or cool set temperature.



Adjust the desired set temperature with the



buttons.

Using the Fan Button



Fan On indicates constant fan operation. If Fan On is selected the fan will run continuously at all times, except in Off, **and** will only run if there is a heating or cooling demand in Unoccupied periods. Pressing the FAN button toggles this feature on or off.

SECTION 2
Getting to Know Your Thermostat **TOTALINE**



2

Section 2 Contents:

- *Front Panel Buttons*.....2.2
- *Display Features*.....2.3


Front Panel

2

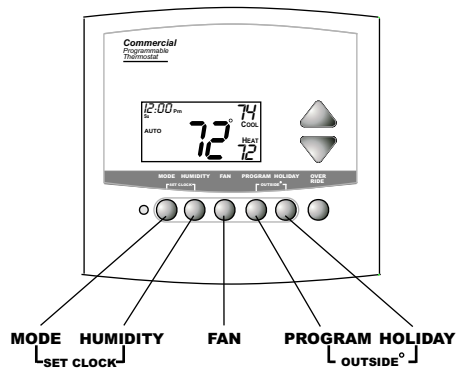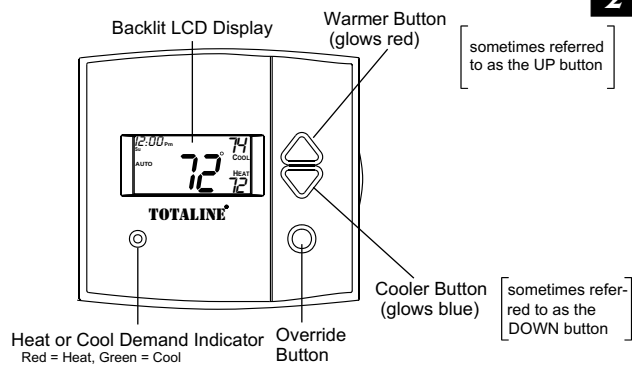

Display Features


2

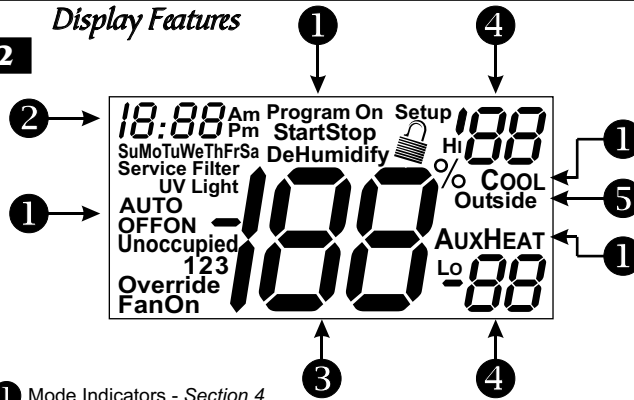

- 1** Mode Indicators - *Section 4*
 Selects the operational mode of the equipment.
HEAT - Indicates the heating mode.
COOL - Indicates the air conditioning mode.
AUTO - Indicates the system will automatically changeover between heat and cool modes as the temperature varies.
OFF - Indicates heating and cooling is turned off.
PROGRAM ON - Indicates the time period program is enabled to run.
- 2** Clock with Day of the Week - *Section 3*
 Indicates the current time and day. This clock is also used to program the timer periods.
- 3** Room Temperature Display - *Section 5*
 Indicates the current room temperature and displays the outside temperature when selected.
- 4** Desired Set Temperature - *Section 4/5*
 Indicates desired room temperature(s). Also displays the daily maximum and minimum outside temperatures.
- 5** Outside icon - *Section 5*
 Indicates the temperature displayed is from the optional outside sensor.

Display Features


2

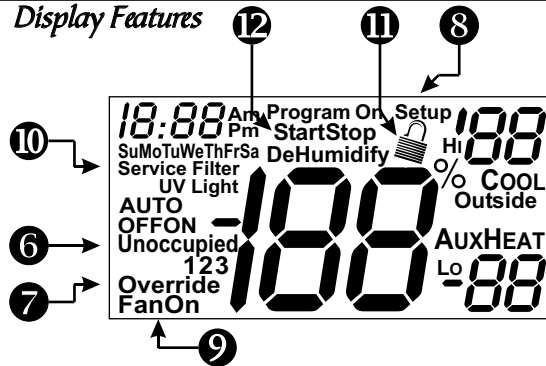

- 6** **Occupied & Unoccupied** icons - *Section 6*
Indicates the program number: Occupied 1,2,3, or Unoccupied.
- 7** **Override** icon - *Section 6*
Indicates the program is currently being overridden for up to 4 hours.
- 8** **Setup** icon - *Sections 7-15*
Indicates the thermostat is in the setup mode.
- 9** **Fan On** icon - *Section 7*
Indicates constant, continuous fan operation. When **Fan On** is not lit - indicates the fan will only operate when necessary to heat or to cool.
- 10** **Service Filter** icon - *Section 15*
Appears when the filter should be serviced under normal conditions. Adjustable from 0 - 1950 hours of blower operation.
- 11** icon - *Section 8*
Indicates keypad has been locked.
- 12** **StartStop** icon - *Section 6*
Appears when programming occupied time periods.

Display Features

2

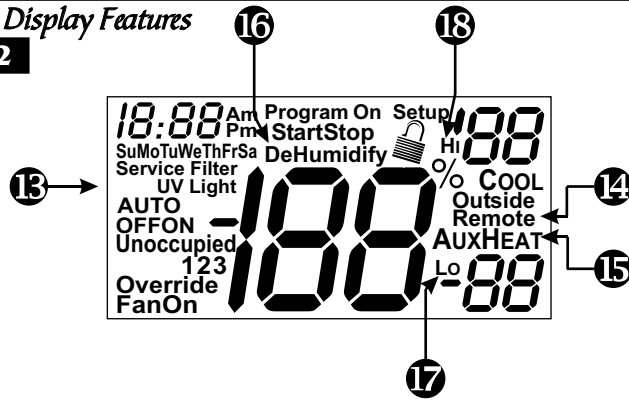

- 13** UV Light icon - *Section 11/15*
 Appears when the UV bulb should be serviced under normal conditions. Adjustable from 0 - 1950 days of operation.
- 14** Remote icon - *Section 5*
 Indicates the remote sensor reading of the thermostat is being viewed.
- 15** AuxHeat icon - *Section 12*
 Indicates the Heat Pump is currently using 2nd stage electric strip heat.
- 16** Humidify/DeHumidify icon - *Sections 9-10*
 Indicates the system is currently humidifying/dehumidifying the air.
- 17** Lo icon - *Section 5*
 Indicates the lowest recorded outside temperature for the day.
- 18** Hi icon - *Section 5*
 Indicates the highest recorded outside temperature for the day.

SECTION 3
Setting the Clock and Day




3

Section 3 Contents:

- *Setting the Clock*.....3.2
- *Setting the Day*.....3.2

Note: During setup & programming pressing the UP or DOWN buttons will modify the flashing selection.

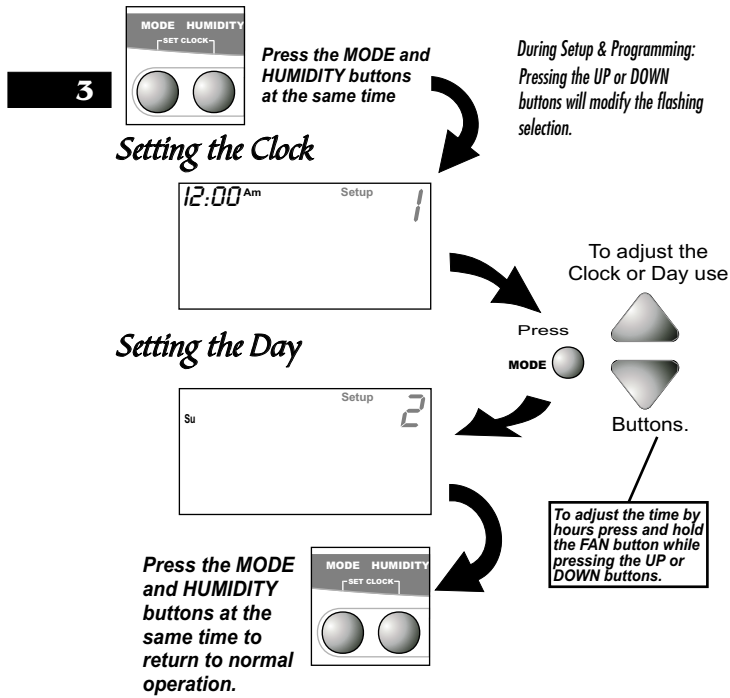

SECTION 4
Basic Operation

TOTALINE

4

Section 4 Contents:

- *Programming for Auto or
Program Operation.....4.2*
- *Selecting the Proper
Operating Mode.....4.3*
- *Selecting Your Desired
Temperature.....4.8*

Note: *During setup & programming pressing the UP or DOWN buttons will modify the flashing selection.*


Programmable or Non-Programmable Thermostat


4

When the very simplest operation is desired, this thermostat may be configured to be non-programmable, with or without Auto-Changeover. Follow the step below.


If 'NO' is selected, the thermostat will lockout the Program On screen; only the Off, Heat, Cool, and Auto screens may be accessed by pressing the MODE button.


Select 'YES' if you would like your thermostat to be **programmable**, then the Program mode will be accessible through the use of the MODE button. This is the default, factory setting.


MODE  *Press the MODE button. While holding the MODE, press the PROGRAM button to enter Setup screens.*

PROGRAM 

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

YES  Select Yes if you would like the thermostat to be programmable or No for non-programmable.

NO 

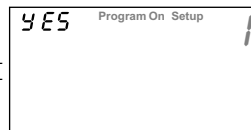


Press the PROGRAM button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


Manual or Auto-Changeover Thermostat


When the very simplest operation is desired, this thermostat may be configured to be a manual heat and cool thermostat, with or without time period programmability. Follow the step below.

4


The thermostat may be programmed to function as a Heat Only or Cool Only thermostat by selecting 'NO' in the setup screen below. This will lockout the Auto-Changeover screen and only allow the Off, Heat, Cool, and Program On screens to be accessed.


MODE  *Press the MODE button. While holding the MODE, press the PROGRAM button to enter Setup screens.*

PROGRAM 

MODE  *Press the MODE button repeatedly until this setup screen appears.*


Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

YES  Select Yes if you would like the thermostat to be Auto-Changeover or No for a Heat Only and Cool Only Thermostat.

NO 

4 5 5 Setup 2

AUTO

Press PROGRAM 

Press the PROGRAM button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Operating Mode when the Thermostat is Configured to be:

4

NON-PROGRAMMABLE WITH MANUAL-CHANGEOVER - If the thermostat is configured to be a non-programmable thermostat with Manual-Changeover, the following screens will be available by pressing the MODE button.

Select the Mode by Pressing the MODE Button


Heating Only
The **HEAT** setting indicates the temperature the room has to reach before the furnace will turn on to heat the room.



Cooling Only
The **COOL** setting indicates the temperature the room has to reach before the air conditioner will turn on to cool the room.



Off
OFF indicates both heating and air conditioning systems are turned off.

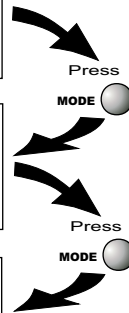


Operating Mode when the Thermostat is Configured to be:

NON-PROGRAMMABLE WITH AUTO-CHANGEOVER - If the thermostat is configured to be a non-programmable thermostat with Auto-Changeover, the following screens will be available by pressing the MODE button

Select the Mode by Pressing the MODE Button

Heating Only

The **HEAT** setting indicates the temperature the room has to reach before the furnace will turn on to heat the room.

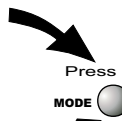


Cooling Only

The **COOL** setting indicates the temperature the room has to reach before the air conditioner will turn on to cool the room.



Heating or Cooling

AUTO will automatically select heat or cool based on room temperature demand.

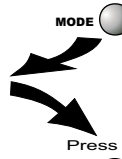

Off

OFF indicates both heating and air conditioning systems are turned off.



Operating Mode when the Thermostat is Configured to be:

 
PROGRAMMABLE WITH MANUAL-CHANGEOVER - If the thermostat is configured to be a programmable thermostat with Manual-Changeover, the following screens will be available by pressing the MODE button.

4

Select the Mode by Pressing the MODE Button



Heating Only

The **HEAT** setting indicates the temperature the room has to reach before the furnace will turn on to heat the room.





Cooling Only

 The **COOL** setting indicates the temperature the room has to reach before the air conditioner will turn on to cool the room.

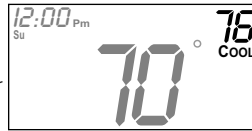



Time Schedule for Heating Only

The **HEAT Program On** setting will activate the time period program for the heating setpoint ONLY (occupied or unoccupied periods).

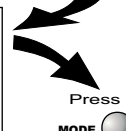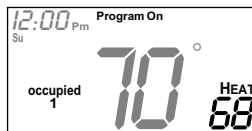


Time Schedule for Cooling Only

The **COOL Program On** setting will activate the time period program for the cooling setpoint ONLY (occupied or unoccupied periods).

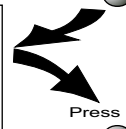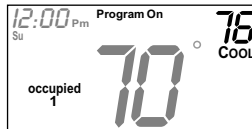

Off

OFF indicates both heating and air conditioning systems are turned off.

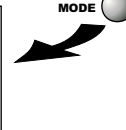


Operating Mode when the Thermostat is Configured to be:

PROGRAMMABLE WITH AUTO-CHANGEOVER - If the thermostat is configured to be a programmable thermostat with Auto-Changeover, the following screens will be available by pressing the MODE button.


4

Select the Mode by Pressing the MODE Button


Heating Only
The **HEAT** setting indicates the temperature the room has to reach before the furnace will turn on to heat the room.

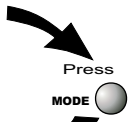


Cooling Only
The **COOL** setting indicates the temperature the room has to reach before the air conditioner will turn on to cool the room.

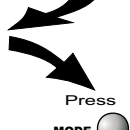


Heating or Cooling
AUTO will automatically select heat or cool based on room temperature demand.

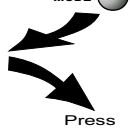

Time Schedule for Heating or Cooling
Program On will activate the time period program for the heating and cooling setpoints. (occupied or unoccupied periods)

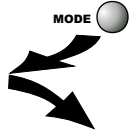

Off
OFF indicates both heating and air conditioning systems are turned off.

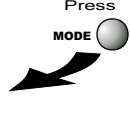

Selecting Your Desired Temperature (adjusting setpoints)

AUTO OR PROGRAM MODE

Pressing the UP or DOWN buttons in Auto or Program modes will adjust **both** the heat and cool set temperatures simultaneously. For more information on this see page 13.2.



Adjust the desired set temperature with the



buttons.

HEAT OR COOL MODE

Pressing the UP or DOWN buttons in Heat or Cool modes will adjust only the heat or cool set temperature.



Adjust the desired set temperature with the



buttons.

Note: Due to the Random Start feature there will be a 2 to 30 second delay before heating or cooling may be energized. This delay helps to keep multiple thermostats from energizing their outputs at the same time after a power outage.

SECTION 5
Viewing the Temperature and Humidity Sensors

TOTALINE

5

 
Section 5 Contents:

- *Viewing the Outside*
Temperature.....5.2
- *Viewing the Indoor*
Humidity.....5.3

Viewing the Outside Temperature

Requires an outside sensor (optional accessory) to be installed. To read the temperature from the Outside Sensor, press the PROGRAM and HOLIDAY buttons. The display will then show the current outside temperature along with the High and Low temperatures for the day.

5



Press the PROGRAM button. While holding PROGRAM, press the HOLIDAY button to view the Outside temperature.

The High and Low temperatures for the day will be displayed along with the current outside temperature. This reading is from the sensor connected to RS2.

 


High temperature for the day.

Current outside temperature.

Low temperature for the day.

Press the PROGRAM button. While holding PROGRAM, press the HOLIDAY button to leave the Outside temperature screen.




Note: If no sensors are connected 2 dashes [- -] will appear on the display.

Viewing the Indoor Humidity

Requires the Humidity Module (optional accessory) to be installed. To display the current humidity at the thermostat, press the HUMIDITY button of the thermostat. The display will then show the current indoor humidity along with the humidification setpoint (Section 9).

5

Note: The humidity reading will not appear unless the Humidity Module has been installed. If a sensor has not been installed dashes will appear in place of the humidity reading.

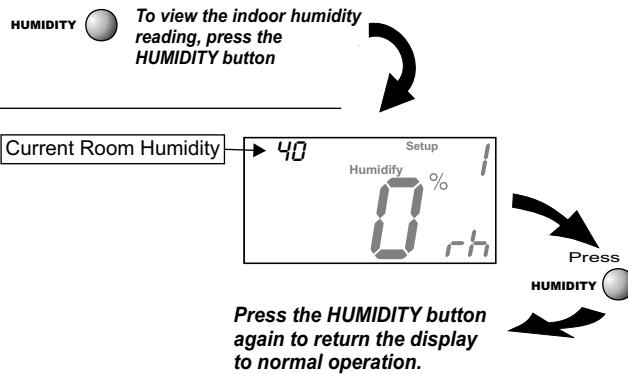

NOTE: Due to variations in environmental conditions, it is not always possible to achieve the desired humidification or dehumidification setpoint.

SECTION 6
Programming the Daily Schedule

TOTALINE

Section 6 Contents:

6	■ <i>Programming a Daily Schedule.....</i>	6.2
	■ <i>Overriding the Daily Schedule.....</i>	6.6

Programming a Daily Schedule

Press
PROGRAM

Press the **PROGRAM** button to enter time period programming.

 
Use the Programming Worksheet on the back cover to help with this section.





Select the maximum # of occupied periods to be used on any one day. Typically most installations use only Occupied 1. (1, 2 or 3)




6



 
Adjust the cooling setpoint for Occupied 1. (35° - 99° OF)

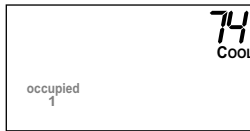


Adjust the heating setpoint for Occupied 1. (OF, 35° - 99°)

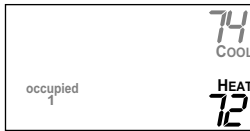


Adjust the cooling setpoint for unoccupied periods. (35° - 99° OF)

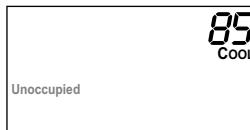

Continued

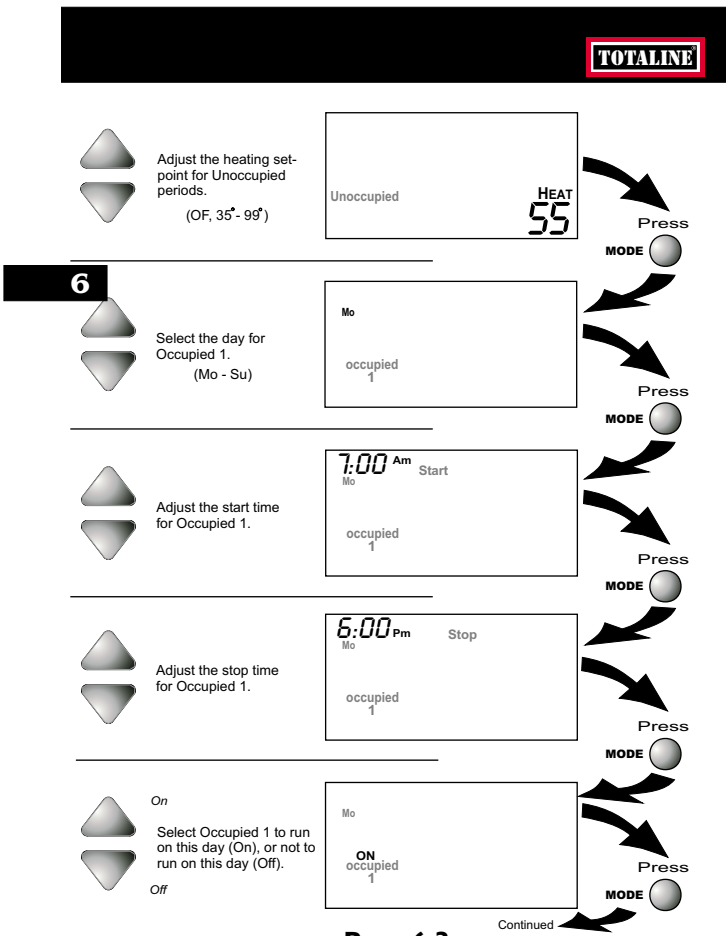


The copy command becomes available after the maximum # of occupied periods are programmed in a day. This example uses only one occupied period.

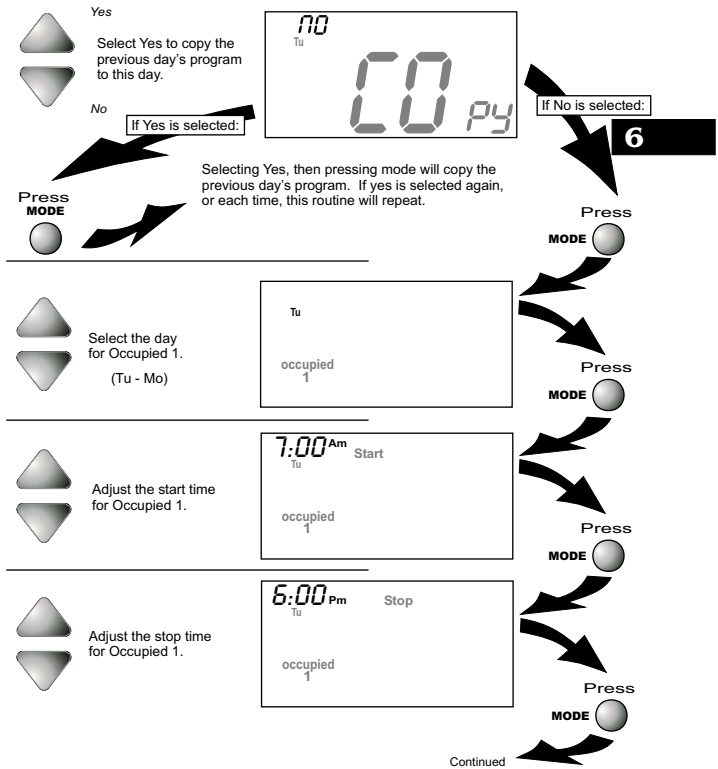



On
Select Occupied 1 to run on this day (On), or not to run on this day (Off).
Off

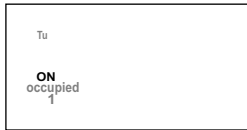

6



Yes
Select Yes to copy the previous day's program to this day.
No | If Yes is selected:



If No is selected:



Press MODE
Selecting Yes, then pressing mode will copy the previous day's program. If yes is selected each time, this routine will repeat.



If **No** is selected, as in previous steps, flashing prompts will appear to input start and stop times for Occupied 1. If more than one occupied period was selected in the first programming step (page 6.2), then the cool and heat setpoints, and start and stop times for each additional occupied period will be prompted.



Press PROGRAM
After programming for all seven days is complete, press the PROGRAM button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

PROGRAMMING TIPS


- * If only the Occupied 1 period is selected in the first programming step (page 6.2), Occupied 2 & 3 programming steps are skipped. Further, if Occupied 2 is selected, Occupied 3 programming steps are skipped.
- * Heat & Cool setpoints for Occupied 1 are the same for every day of the week. If desired, Heat & Cool setpoints for Occupied 2 & 3 can be adjusted differently for each day of the week.
- * **If the start time is set later in the day than the stop time**, the program will run from the start time to midnight and from midnight to the stop time on the same day. *For example: 9pm start, 8am stop, on Monday. In this example the program will run from 12am Monday to 8am Monday and again from 9pm Monday to 12am Tuesday.*
- * **Unoccupied Operation:** The unoccupied settings take effect at all times when: (1) the program is on and (2) the current time is outside a preset occupied period. For this reason start and stop times are not necessary for unoccupied time periods.
- * If the **same** start and stop times are programmed for an occupied period, then it will run 24 hours.
- * If one occupied period starts and stops within another occupied period the lower occupied # has priority. *For example: If Occupied 3 is programmed to be on 24 hours, and Occupied 2 is programmed to run that day, then the Occupied 2 setting will take over for Occupied 3 between Occupied 2 start and stop times.*

Overriding the Daily Schedule

The OVERRIDE button may be used to interrupt the normal time schedule programming of the thermostat. Override may only be used when the thermostat is running the time schedule, in Program On mode.

Unoccupied Operation - During programmed, unoccupied periods pressing the OVERRIDE button will temporarily force the thermostat into Occupied 1 comfort settings for 30 minutes. The remaining Override time will alternate with the clock (refer to the second display below). The Override timer can be set up to a maximum of four (4:00) hours, in increments of 30 minutes. If the timer has been set for the maximum time, the next press of the OVERRIDE button will reset the timer, returning the thermostat to the correct time period program for the day.

Occupied Operation - During programmed, occupied periods, a press of the OVERRIDE button will force the thermostat into an unoccupied period for the remainder of the day. During this forced unoccupied period the OVERRIDE button will operate as described above.

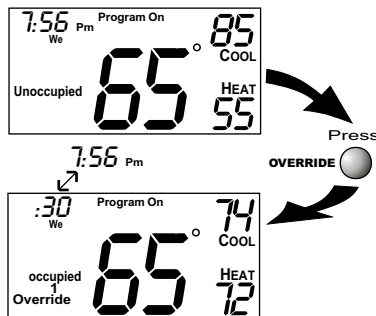

SECTION 7
Programming the Fan Operation

TOTALINE

Section 7 Contents:

- *Using the Fan Button.....7.2*
- 7** ▪ *Setting the Fan-Off Time
Delay.....7.3*

Using the Fan Button

When the fan is set for automatic operation it will energize any time there is a call for heating or cooling, otherwise the fan will remain off. Pressing the FAN button will energize the fan and display the **FanOn** icon on the thermostat display. To operate the fan in the automatic mode, press the FAN button again and the FanOn icon will disappear.




7

Fan On indicates constant fan operation. If Fan On is selected the fan will run continuously at all times, except in Off, **and** will only run if there is a heating or cooling demand in Unoccupied periods. Pressing the FAN button toggles this feature on or off.

Setting the Fan-Off Time Delay


To increase cooling efficiency of your unit, the thermostat may be programmed to continue running the fan after a call for cooling has been satisfied. This delay may be set for 30, 60, or 90 seconds. If the Fan Off Delay is set for zero seconds, the fan will not energize after a call for cooling has been satisfied.

7

MODE  Press the **MODE** button. While holding the **MODE**, press the **PROGRAM**

PROGRAM 


button to enter Setup screens.

MODE  Press the **MODE** button repeatedly until this setup screen appears.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*



Set the Fan Off Delay to 0, 30, 60, or 90 seconds.

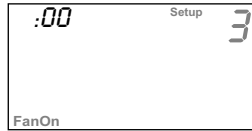



Press the **PROGRAM** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Section 8 Contents:

- *Turning On/Off the Backlight.....8.2*
- *Programming the Thermostat to Display Temperature in Fahrenheit or Celsius.....8.2*
- *Locking/Unlocking the Keypad.....8.3*
- *Programming a Security Level.....8.4*

Turning On/Off the Backlight

MODE  Press the **MODE** button. While holding the **MODE**, press the **PROGRAM** button to enter Setup screens.

MODE  Press the **MODE** button repeatedly until this setup screen appears.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*



- 8**  Select backlight operation:
AUTO - Light from 6pm to 6am nightly.
 **ON** - Light continuously.
OFF - Light for 8 seconds after a button press.




Press

MODE 

Programming the Thermostat to Display Temperature in Fahrenheit or Celsius

- C**  Select thermostat operation in degrees Fahrenheit or Centigrade.
 **F**

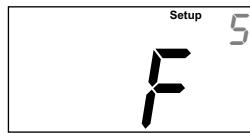


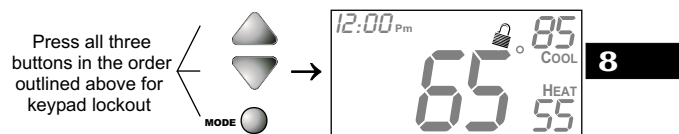
Press

PROGRAM 

Press the **PROGRAM** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Locking/Unlocking the Keypad



To prevent unauthorized use of the thermostat, the front panel buttons may be disabled. To disable, or 'lock' the keypad, press and hold the MODE button. While holding the MODE button, press the UP and DOWN buttons together. The  icon will appear on the display, then release the buttons.




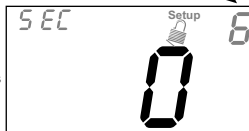
To **unlock** the keypad, press and hold the MODE button. While holding the MODE button, press the UP and DOWN buttons together. The  icon will disappear from the display, then release the buttons.

Programming a Security Level


When a security level has been programmed, the thermostat will allow limited adjustment to the setpoints (steps #7 and 8) and, in security levels 2 and 3, the thermostat will be forced into the Program On mode. To disable the security feature, program step #6 to 0; this will cause steps #7 and 8 not to appear.

- 8**
- MODE**  Press the **MODE** button. While holding the **MODE**, press the **PROGRAM** button to enter Setup screens.
 - PROGRAM**  Press the **MODE** button repeatedly until this setup screen appears.
- Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.*

-  Select the security level:
- 0=No security in effect
- 1=Setpoint range limited
- 2=1+ program on all times
- 3=2 + prohibits setpoint changes




Step #7 appears only if step #6 is not 0.

-  Adjust the maximum allowable heat setpoint when security is in effect.
- (35°-99°)



Step #8 appears only if step #6 is not 0.

-  Adjust the minimum allowable cool setpoint when security is in effect.
- (35°-99°)



Press the **PROGRAM** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Section 9 Contents:

- **Installing the Humidity
Module.....9.2**
- **Setting a Thermostat Jumper **9**
for Humidity Operation.....9.3**
- **Adjusting the Humidification
Setpoint.....9.4**

NOTE: *The humidification functions described in this section will only be available if a Humidity Module has been properly installed.*

Disclaimer:

The manufacturer of this thermostat cannot be liable for misinstallation, improper connection or improper programming of the humidity functions of this thermostat that may result in water damage or mold growth.

Additionally, the manufacturer of this thermostat is not responsible for the fitness of the humidifier and/or installation of said humidifier connected to this thermostat. Furthermore, the maintenance of the humidifier components, including but not limited to, the filters and pads are not the responsibility of the thermostat manufacturer.

The Humidifier Service icon is only a suggestive reminder and should not take the place of the humidifier manufacturer's required maintenance requirements and schedule.

Installing the Humidity Module

To install the Humidity Module the thermostat must be detached from the back plate. Plug the Humidity Module into the Humidity Module connector as shown in Figure 2 below. Follow the detailed instructions included with the Humidity Module accessory. Once the Humidity Module has been installed, you must adjust the Humidity jumper setting to HUM as shown in Figure 1 below. This will allow you to access the humidification and dehumidification setup steps.

For proper humidity operation, this jumper must be set for HUM.

9

Back of P374-2800



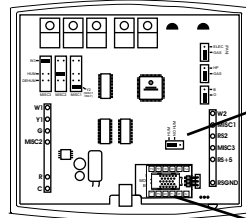


Figure 1

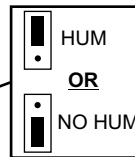

Install the Humidity Module
(see Humidity Module Instruction Sheet for more detailed information).

Figure 2


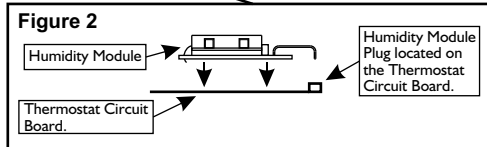



Setting a Thermostat Jumper for Humidity Operation

To operate one of the MISC outputs using humidity-based operation, place the MISC1, MISC2, or MISC3 jumper on the terminal labeled HUM (see diagram below). This will supply 24VAC to the selected MISC terminal based on the humidification programming in the following pages. Only one of the three outputs (MISC1, MISC2, or MISC3) is required to have this jumper. For more information regarding the MISC1, MISC2, and MISC3 outputs, please see section 17.

In the diagram below, the MISC3 jumper has been set for HUM (humidity) operation.

9

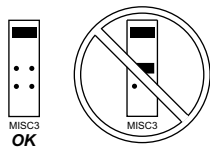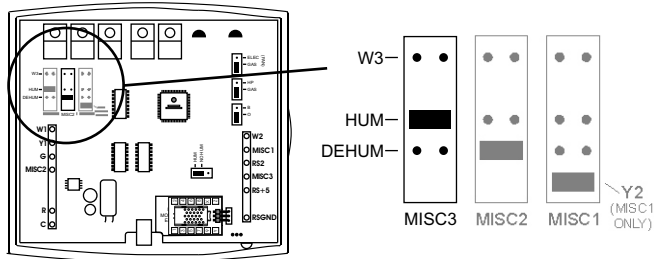

IMPORTANT CAUTION 


NEVER PUT MORE THAN ONE JUMPER ON THE SAME MISC JUMPER BLOCK!

THIS MAY DAMAGE THE THERMOSTAT AND VOID YOUR WARRANTY

Adjusting the Humidification Setpoint

If your HVAC unit is equipped with a humidification system and the Humidity Module has been installed, the thermostat will provide power to the appropriate terminal on the backplate of the thermostat when the humidity in the home falls below the setpoint you have chosen. The value for this setpoint ranges from 0% to 60%.

NOTE: Due to variations in environmental conditions, it is not always possible to achieve the desired humidification or dehumidification setpoint.

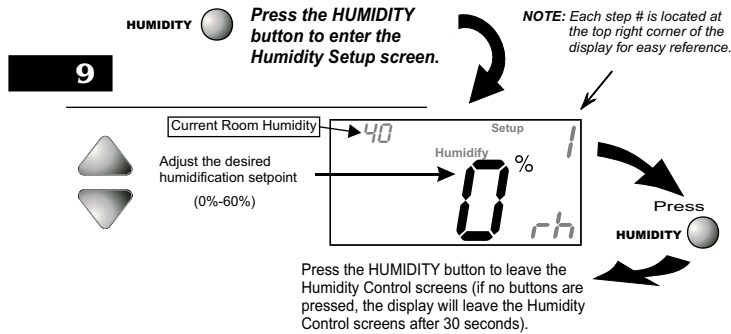

Humidification Notes: Press the  button to set the humidity setpoint to 0% for no humidification operation.

You cannot set the dehumidify setpoint any lower than the humidify setpoint; a 5% differential is forced between the humidify and dehumidify setpoints.

SECTION 10
Dehumidification

TOTALINE

Section 10 Contents:



- *Configuring a Thermostat Output Jumper for Dehumidification Operation.....10.2*
- *Adjusting the Dehumidification Setpoint.....10.3*
- *Using Your Air Conditioner to Dehumidify.....10.4*
- *Using the DEHUM Terminal.....10.5*


NOTE: The dehumidification functions described in this section will only be available if a Humidity Module has been properly installed. For instructions on installing the Humidity Module please see page 9.2.

Setting a Thermostat Jumper for Dehumidification Operation

To operate one of the MISC outputs using dehumidification-based operation, install the Humidity Module and place the Humidity Jumper on HUM (see page 9.2). Then place the MISC1, MISC2, or MISC3 jumper on the terminal labeled DEHUM (see diagram below). This will supply 24VAC to the selected MISC terminal based on the programming in the following pages. Only one of the three outputs (MISC1, MISC2, or MISC3) is required to have a jumper. For more information regarding the MISC1, MISC2, and MISC3 outputs, please see section 17.

10 In the diagram below, the MISC2 jumper has been set for DEHUM (dehumidification) operation.

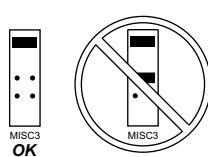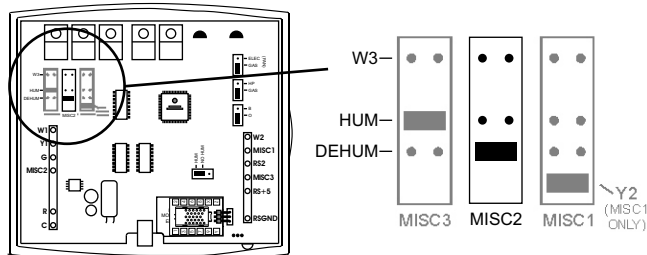



IMPORTANT CAUTION 
NEVER PUT MORE THAN ONE JUMPER ON THE SAME MISC JUMPER BLOCK!
THIS MAY DAMAGE THE THERMOSTAT AND VOID YOUR WARRANTY

Adjusting the Dehumidification Setpoint

If your HVAC unit is equipped with a dehumidification terminal and the Humidity Module has been installed, the thermostat will provide power to the appropriate terminal on the backplate of the thermostat when the humidity in the home is above the setpoint you have chosen. When the indoor humidity rises above the setpoint you have selected, the appropriate terminal will be de-energized (see page 10.5). The value for this setpoint ranges from 25% to 99%.


NOTE: Due to variations in environmental conditions, it is not always possible to achieve the desired humidification or dehumidification setpoint.



HUMIDITY  **Press the HUMIDITY button to enter the Humidification Setup screens.**


MODE  **Press the MODE button once**

NOTE: Each step # is located at the top right corner of the display for easy reference.

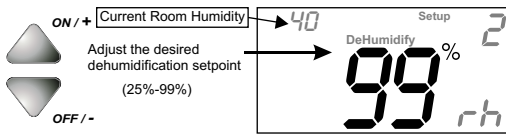
10



ON / +  Current Room Humidity → 40 Setup 2
Adjust the desired dehumidification setpoint (25%-99%) → 99% DeHumidify % rh
OFF / - 

Press **HUMIDITY** 




Press the HUMIDITY button to leave the Humidity Control screens (if no buttons are pressed, the display will leave the Humidity Control screens after 30 seconds).

Dehumidification Notes: Press the  button to set the dehumidification setpoint to 99% for no dehumidification operation. This will lockout Advanced Setup steps 9 and 10 (see page 10.4).


You cannot set the dehumidify setpoint any lower than the humidify setpoint; a 5% differential is forced between the humidify and dehumidify setpoints.

Using Your Air Conditioner to Dehumidify

If Cool to Dehumidify is on and the Humidity Module is installed, the thermostat has the ability to initiate a cooling cycle for advanced dehumidification operation. When the thermostat detects the humidity percentage is above the setpoint for dehumidification, and heating or cooling is not on, the thermostat will force the compressor to run with the fan, thus reducing moisture in the air. This feature will also allow you to adjust the cooling overshoot of the setpoint, from 0° to 5° (adjustable in step #10). *For Example: If the cooling overshoot is set for 3°F and the cooling setpoint is set for 74°F, then as long as the room temperature reads between 71°F and 74°F this feature will energize the compressor and fan to dehumidify the air.*

- 10**
- MODE**  **Press the MODE button. While holding the MODE, press the PROGRAM button to enter Setup screens.**
 - PROGRAM** 
 - MODE**  **Press the MODE button repeatedly until this setup screen appears.**
- Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.*

Steps 9 and 10 only appear if the Dehumidification setpoint is not 99% (see page 10.3).

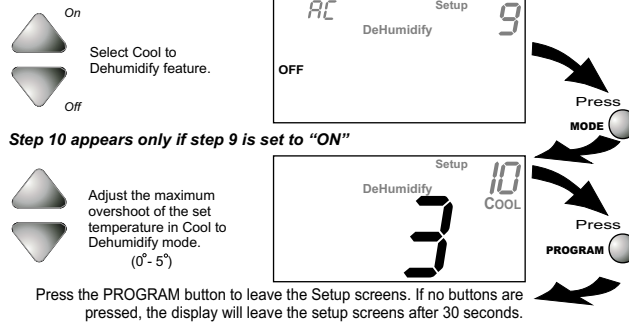


Dehumidification Notes: The thermostat must be in the Cool, Auto, or Program On mode for the Cool to Dehumidify feature to be available.


Using the Dehum Terminal


If you configure a MISC output jumper for DEHUM, it may be programmed to operate in one of two ways:

- 1) **Normally Closed (NC):** The thermostat will de-energize the DEHUM terminal to allow the fan to run in low speed when there is a call for 1st stage cooling and the room humidity is greater than the dehumidification setpoint.
- 2) **Normally Open (NO):** The thermostat will energize the DEHUM terminal to allow the fan to run in low speed when there is a call for 1st stage cooling only and the room humidity is greater than the dehumidification setpoint.

10

MODE  *Press the MODE button. While holding the MODE, press the PROGRAM button to enter Setup screens.*


PROGRAM 


MODE  *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

NC Normally Closed (NC) = DEHUM de-energized for low speed fan.

NO Normally Open (NO) = DEHUM energized for low speed fan.

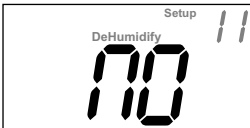

Press 

Press the PROGRAM button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Dehumidification Notes: The DEHUM terminal will “release” and allow the fan to operate normally if there is call for 2nd stage cooling or if the call for Cooling and/or Cool to Dehumidify has been satisfied.

SECTION 11
Viewing Equipment Run-Times


TOTALINE


Section 11 Contents:

- *Viewing the Override
Run-Time.....11.2*
- *Viewing the Humidifier
Run-Time..... 11.3*
- 11** ▪ *Viewing the UV Light
Run-Time.....11.4*


Viewing the Override Operation Run-Time

This display will track the number of hours that your thermostat has been operating in the Override mode (see page 6.6). Press the FAN button to reset the counter.

MODE  Press the **MODE** button. While holding the **MODE**, press the **PROGRAM** button to enter Setup screens.

MODE  Press the **MODE** button repeatedly until this setup screen appears.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*

Press  Counts the number of hours Override has been active. Press **FAN** to reset the Override Run-Time counter.




11


Press  **PROGRAM**

Press the **PROGRAM** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Viewing the Humidification Run-Time


After your humidification system has been operating for the number of days set in step #13 below, the Service Humidify icon will appear. This counter keeps track of the number of days since the Service Humidify icon was reset.


MODE  *Press the MODE button. While holding the MODE, press the PROGRAM button to enter Setup screens.*

MODE  *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

11


Press  Counts the number of days the humidifier has been running. Press FAN to reset the Service Humidify counter and remove the icon from the display.

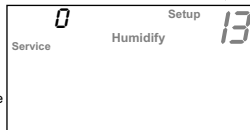



Press the PROGRAM button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Viewing the UV Light Run-Time


After the UV light has been operating for the number of days set in step #14 below, the Service UV Light icon will appear. This counter keeps track of the number of days since the UV light icon was last reset.

 
MODE  *Press the MODE button. While holding the MODE, press the PROGRAM button to enter Setup screens.*


PROGRAM 

MODE  *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

Press  **FAN** Counts the number of days since the UV Light was last reset. Press FAN to reset the Service UV Light counter and remove the icon from the display.


Setup
14
 Service UV Light

Press  **PROGRAM**

Press the PROGRAM button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

11

SECTION 12
Electric Heat and Heat Pump Operation

 
TOTALINE


Section 12 Contents:

- *Viewing the Heat Pump and Reversing Valve Jumper Setting.....12.2*
- *Viewing the Electric Heat Jumper Setting.....12.3*
- 12** ■ *Using Emergency Heat.....12.4*

Viewing the Heat Pump and Reversing Valve Jumper Settings

Steps 15 and 16 are 'Read Only' and may only be set with the jumpers on the circuit board of the thermostat.

MODE  Press the **MODE** button. While holding the **MODE**, press the **PROGRAM** button to enter Setup screens.

MODE  Press the **MODE** button repeatedly until this setup screen appears.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*



ON = Heat Pump operation
OFF = Gas Electric operation



Indicates that the thermostat jumper is set for an **O** reversing valve (energize in cooling) or a **b** reversing valve (energize in heating).



12

Press

MODE 

Press


PROGRAM 


Press the **PROGRAM** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


Viewing the Electric Heat Jumper Setting

Placing the jumper on ELEC will cause the thermostat to turn on the fan immediately any time there is a heat demand. Since most gas furnaces control the fan, this feature should be off unless the heater is only electric.

Step 17 is 'Read Only' and may only be set with the jumpers on the circuit board of the thermostat.

MODE  *Press the MODE button. While holding the MODE, press the PROGRAM button to enter Setup screens.*

PROGRAM 

MODE  *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

12



ON indicates that the thermostat jumper is set for Electric Heat operation, or OFF for Gas/Electric or Heat Pump operation.




Press 

Press the PROGRAM button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Using Emergency Heat

ENTER EMERGENCY HEAT: Only available if you have a Heat Pump installed. To initiate the Emergency Heat feature, press the FAN button. While holding the FAN button press the UP button. The Cool setpoint display will read 'EH' (emergency heat).

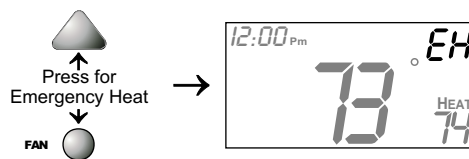

OPERATION: During Emergency Heat operation the thermostat will turn on the fan and the 2nd stage of heat when there is a demand for heat. Also during Emergency Heat the 1st stage of heating or cooling will be unavailable.

12

EXIT EMERGENCY HEAT: Follow the same steps as entering Emergency Heat by pressing the FAN and UP buttons. During Emergency Heat, only OFF and HEAT modes are available by pressing the MODE button.




Section 13 Contents:

- *Adjusting the Heat/Cool Differential.....13.2*
- *Adjusting the Cycles Per Hour.....13.3*
- *Adjusting the Deadband.....13.4*
- *Adjusting the Minutes of Run-Time Before the Next Stage.....13.6*
- *Selecting 2nd Stage Turn Off Temperature.....13.7*


13


Adjusting the Heat/Cool Differential

The Heat and Cool setpoints will not be allowed to come any closer to each other than the value in this step. This minimum difference is enforced during Auto-Changeover operation.

- MODE**  Press the **MODE** button. While holding the **MODE**, press the **PROGRAM** button to enter Setup screens.
- PROGRAM** 
- MODE**  Press the **MODE** button repeatedly until this setup screen appears.

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

 Adjust the minimum **difference** between cooling & heating setpoints.
(0°-6°)

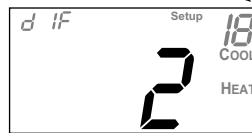

Press 




13

Press the **PROGRAM** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


Note: To increase the spread between the heating and cooling setpoints, press the **MODE** button until only the heat setpoint is displayed. Adjust the desired setpoint. Press the **MODE** button until only the cool setpoint is displayed. Adjust the desired setpoint. Press the **MODE** button again to enter the Auto-Changeover mode where both the heat and cool setpoints are displayed.

Adjusting the Cycles Per Hour


The Cycles Per Hour setting may limit the number of times per hour your HVAC unit may energize. For example, at a setting of 6 cycles per hour the HVAC unit will only be allowed to energize once every 10 minutes. The Cycles Per Hour limit may be overridden and reset by pressing any button on the thermostat.

- MODE**  **Press the MODE button. While holding the MODE, press the PROGRAM button to enter Setup screens.**
 - PROGRAM** 
 - MODE**  **Press the MODE button repeatedly until this setup screen appears.**
- Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.*

13



Select the cycles per hour limit.
d=cycles per hour limit defeated.
d1=d + defeat 5 min. compressor lockout.
(d1, d, 2 - 6)




Setup

19

6

CY

Press 

Press the PROGRAM button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Adjusting the Deadband

MULTI-STAGE OPERATION - Controls up to three Heat and two Cool stages.

The **2nd Stage** of heat or cool is turned on when:

- (A) The 1st Stage has been on for the time required (*step #23, page 13.6*). It is adjustable from 0-60 minutes and the default is two minutes.

And

- (B) The temperature spread from the setpoint is equal to or greater than: *the setpoint plus the 1st stage deadband (step #20, next page), plus the 2nd stage deadband (step #21, next page)*. This 2nd stage deadband is adjustable from 0-10 degrees and the default is two degrees.


The **3rd Stage** of Heat is turned on when:

- (A) The 2nd stage has been on for the time required (*step #24, page 13.6*). It is adjustable from 0-60 minutes and the default is two minutes.

And

- (B) The temperature from the setpoint is equal to or greater than: *the setpoint plus the 1st stage deadband (step #20, next page), plus the 2nd stage deadband (step #21, next page) plus the 3rd stage deadband (step #22, next page)*. This 3rd stage deadband is adjustable from 0-10 degrees and the default is two degrees.


13

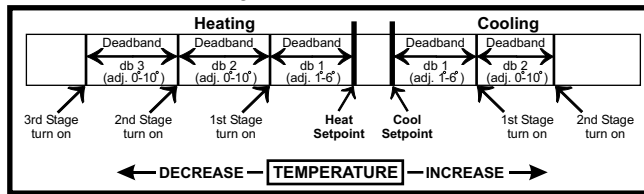



The above figure assumes the minimum on time for the prior stage has been met to allow the next stage to turn on, once the deadbands have been exceeded.

Adjusting the Deadband

For more detailed information, please see the explanation on the previous page.

MODE  Press the **MODE** button. While holding the **MODE**, press the **PROGRAM** button to enter Setup screens.


PROGRAM 

MODE  Press the **MODE** button repeatedly until this setup screen appears.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*



Adjust the deadband for the 1st stage.
(1° - 6°)

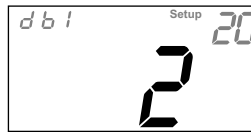


13



Adjust the deadband for the 2nd stage.
(0° - 10°)



 
Adjust the deadband for the 3rd stage.
(0° - 10°)




Press the **PROGRAM** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


Adjusting the Minutes of Run-Time Before the Next Stage


For more detailed information, please see the explanation on page 13.4.


MODE  Press the **MODE** button. While holding the **MODE**, press the **PROGRAM** button to enter Setup screens.


MODE  Press the **MODE** button repeatedly until this setup screen appears.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*

 Adjust the amount of time stage 1 must be on before stage 2 turns on.
(0 - 60 min.)

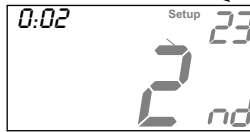

 Adjust the amount of time stage 2 must be on before stage 3 turns on.
(0 - 60 min.)

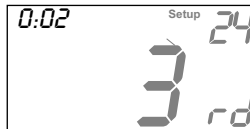

Press **MODE**  **13**

Press **PROGRAM** 


Press the **PROGRAM** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


Selecting 2nd Stage Turn Off Temperature


If ON is selected, the second stage of cooling or heating will remain energized until the thermostat reaches the setpoint on the thermostat display.

If OFF is selected, the second stage of cooling or heating will turn off after reaching the 1st stage deadband (see page 13.4 for more information).


13


MODE  *Press the MODE button. While holding the MODE, press the PROGRAM button to enter Setup screens.*

PROGRAM 

MODE  *Press the MODE button repeatedly until this setup screen appears.*


Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

On  Select On or Off:
On - 2nd stage will remain on until setpoint is reached.

Off  **Off** - 2nd stage will turn off after reaching 1st stage deadband.

Setup 25

OFF 2nd

Press 

Press the PROGRAM button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

SECTION 14 Energy Save Operation


TOTALINE


How to Use the Energy Save Feature

If the thermostat is configured to be programmable (Section 4), and Energy Save has been selected in step #26 (below), the room will attempt to reach the selected comfort temperature at the exact time programmed into the thermostat. Energy Save only works when the thermostat enters Occupied 1 from Unoccupied.

For example, if the Unoccupied program is set for 6pm at 55°F heating and 85°F cooling, and the Occupied 1 program is set for 8am at 72°F heating and 75°F cooling, the thermostat will turn the system on before 8am in an effort to bring the temperature to its correct setting at exactly 8am.


The P374-2800 learns from experience, so please allow 4-8 days after a program change or after initial installation to give Energy Save time to adjust to local weather, the construction of your business, and your heating and cooling system.

MODE  Press the **MODE** button. While holding the **MODE**, press the **PROGRAM** button to enter Setup screens.

PROGRAM  Press the **MODE** button repeatedly until this setup screen appears.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*

14

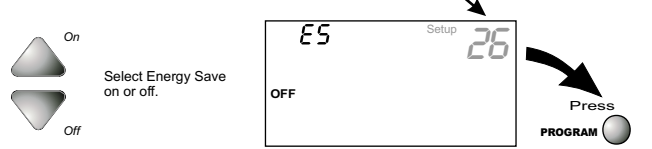

The diagram shows a thermostat control panel with a digital display. To the left of the display are two buttons labeled 'On' and 'Off' with the text 'Select Energy Save on or off.' The display shows 'ES' in the top left, 'Setup' in the top right, and '26' in the center. Below the display is the word 'OFF'. To the right of the display is a 'PROGRAM' button. Arrows indicate the flow of the process: from the 'MODE' button to the display, and from the 'PROGRAM' button back to the thermostat.

Press the **PROGRAM** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

SECTION 15
Programming Run-Time Alarms

TOTALINE

 
Section 15 Contents:


- *Setting and Resetting the Service Filter (Fan Run-Time) Alarm.....15.2*
- *Setting and Resetting the UV Light Run-Time Alarm.....15.3*
- *Setting and Resetting the Humidify Run-Time Alarm.....15.4*


15

How to Set and Reset the Service Filter (Fan Run-Time) Alarm


This counter keeps track of the number of hours of fan run-time whether the fan is energized in the Heating or Cooling modes, or in stand alone fan operation. The Service Filter icon will appear after the preset number of hours of fan run-time in step #28 (below) has been achieved. Setting this counter to zero in step #28 will prevent the Service Filter icon from ever appearing.


MODE  **Press the MODE button. While holding the MODE, press the PROGRAM button to enter Setup screens.**


PROGRAM 


MODE  **Press the MODE button repeatedly until this setup screen appears.**


Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

Hours the fan has run since last reset →  **Setup** 27


Service Filter 


Press  **FAN** Reset the counter to 0 to remove the Service Filter icon from the display.


 Adjust the number of hours in increments of 50 the fan will run before the Service Filter icon appears on the display. 0 = off.
(0 - 1950 hours)




Setup 28

Service Filter 

Press  **MODE**


Press  **PROGRAM**


Press 


Press the PROGRAM button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

How to Set and Reset the UV Light Run-Time Alarm


This counter keeps track of the number of days since the UV Light counter has been reset. The UV Light icon will appear after the number of days has been achieved, as shown in step #29 (below). Setting the counter to zero in Step #29 will prevent the Service UV Light icon from ever appearing.

MODE  **Press the MODE button. While holding the MODE, press the PROGRAM button to enter Setup screens.**

PROGRAM 

MODE  **Press the MODE button repeatedly until this setup screen appears.**


Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

15 **FAN**  **Press** Reset the counter to 0 to remove the Service UV Light icon from the display.

Days since the UV Light icon has been reset → 0

Service UV Light

Setup 14


MODE  **Press the MODE button repeatedly until this setup screen appears.**

Adjust the number of days in increments of 10 before the UV Light icon appears on the display. 0 = off.
(0 - 1990 days)

0

Service UV Light




Setup 29

Press  **PROGRAM**

Press the PROGRAM button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


How to Set and Reset the Humidifier Run-Time Alarm

This counter keeps track of the number of days since the Service Humidify icon was last reset; this icon will appear after the number of days set in step #30 (below) has elapsed. Setting this counter to zero in step #30 will prevent the Service Humidify icon from ever appearing.


- MODE**  Press the **MODE** button. While holding the **MODE**, press the **PROGRAM** button to enter Setup screens.
- PROGRAM** 
- MODE**  Press the **MODE** button repeatedly until this setup screen appears.


Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

Days since the last reset of the Service Humidify counter.


Press  **FAN**

Reset the counter to 0 to remove the Service Humidify icon from the display.

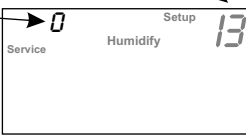



- MODE**  Press the **MODE** button repeatedly until this setup screen appears.

15


 Adjust the number of days in increments of 10 before the Service Humidify icon appears. 0 = Off

(0 - 1990 days)

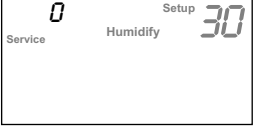

Press  **PROGRAM**


Press the **PROGRAM** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


 *The humidifier run-time alarm does not take the place of any humidifier manufacturer's recommended maintenance plan; it only serves as a helpful reminder.*

SECTION 16 *Programming Holiday Mode*

TOTALINE

When the thermostat is programmed for a Holiday mode, it will take effect at 12:00 am of the next day. The thermostat must be in the Program On mode for Holiday mode to take effect. The thermostat will control to the Unoccupied cooling and heating setpoints set in Section 6, pages 6.2 and 6.3. Holiday setpoints will be enforced for the number of days specified in step #1.

Press  **Press the HOLIDAY button to enter the Holiday programming setup steps.**

 Select the number of days that the Holiday schedule will be in effect. A value of 0 disables Holiday mode.



Press 

Press the HOLIDAY button to exit the setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

16

You cannot set the Heat setpoint any higher than the Cool setpoint minus the deadband setting in Advanced Setup step #18 on page 13.2.

Programming Holiday Mode (continued)

HOLIDAY DISPLAY - When the thermostat is placed into the Holiday mode, the thermostat will display the screen shown below.



To return the thermostat to normal operation from Holiday mode, press the HOLIDAY button and adjust the number of days in step #1 to zero (see *previous page*).

Press the HOLIDAY button to return to normal operation.

SECTION 17
Configuring the MISC Outputs


TOTALINE

Section 17 Contents:

- *Configuring the Jumpers.....17.2*
- *Explanation of Jumper
Settings.....17.3*


Configuring the Jumpers

For additional flexibility, your thermostat has three configurable outputs. These outputs are designed to have different functions depending on how the jumpers are set (*below*). Each output, labeled MISC1, MISC2, and MISC3 may be set for one of the four choices available. In the diagram below, the MISC3 jumper has been set for HUM* (humidification) operation, the MISC2 jumper has been set for DEHUM* (dehumidification) operation, and the MISC1 jumper has been set for Y2 (second stage cooling) operation.

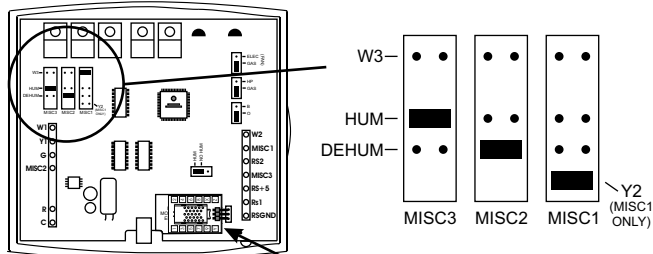

*The Humidity Module (sold separately) must be installed to operate a humidification and/or dehumidification system.

CAUTION
NEVER PUT MORE THAN ONE JUMPER ON THE SAME MISC JUMPER BLOCK!
DOING SO MAY DAMAGE YOUR THERMOSTAT AND VOID THE WARRANTY.

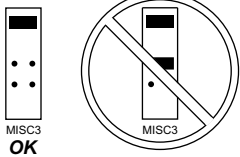

Explanation of Jumper Settings

W3 JUMPER SETTING

If the jumper for MISC1, MISC2, or MISC3 is set to W3, the corresponding MISC screw terminal on the backplate will control a third stage of heat.


W3 MULTI-STAGE OPERATION EXPLAINED - SECTION 13

The 3rd Stage of Heat is turned on when:

(A) The 1st and 2nd stages have been on for the time required (steps 23 and 24, page 13.6). It is adjustable from 0-60 minutes and the default is two minutes.

And

(B) The temperature from the setpoint is equal to or greater than: the setpoint plus the 1st stage deadband (step #20, 13.5), plus the 2nd stage deadband (step #21, 13.5) plus the 3rd stage deadband (step #22, 13.5). This 3rd stage deadband is adjustable from 0-10 degrees and the default is two degrees.

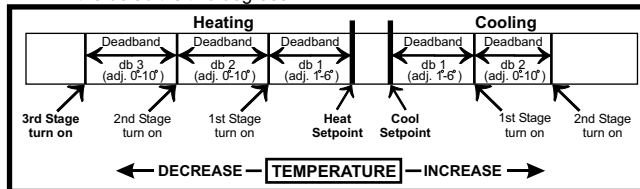

17 HUM JUMPER SETTING

If the jumper for MISC1, MISC2, or MISC3 is set to HUM, the corresponding MISC screw terminal on the backplate will control a humidification system.

HUMIDIFICATION OPERATION - SECTION 9

If your HVAC unit is equipped with a humidification system and the Humidity Module (sold separately) has been installed, the thermostat will provide power to the MISC1, MISC2, or MISC3 terminal of the thermostat when the humidity in the home falls below the humidity setpoint you have chosen. The value for this setpoint ranges from 0% to 60%. If no humidity is desired or if a humidification system has not been installed, set the value to OFF.

Explanation of Jumper Settings (continued)

DEHUM JUMPER SETTING

If the jumper for MISC1, MISC2, or MISC3 is set to DEHUM, the corresponding MISC screw terminal on the backplate will be connected to the dehumidification terminal of a furnace board.
NOTE: *Not all furnaces have a dehumidification terminal.*

DEHUMIDIFICATION OPERATION - SECTION 10

If your HVAC unit is equipped with a dehumidification system the thermostat will operate in one of two ways.

- 1) **Normally Closed (NC):** The thermostat will **de-energize** the MISC1, MISC2, or MISC3 terminal of the thermostat (this MISC terminal is connected to the DEHUM terminal on your furnace) to allow the fan to run in low speed when the humidity in the home is above the dehumidify setpoint you have chosen and there is a call for 1st stage cooling.
- 2) **Normally Open (NO):** The thermostat will **energize** the MISC1, MISC2, or MISC3 terminal of the thermostat (this MISC terminal is connected to the DEHUM terminal on your furnace) to allow the fan to run in low speed when the humidity in the home is above the dehumidify setpoint you have chosen and there is a call for 1st stage cooling.

Explanation of Jumper Settings (continued)

Y2 JUMPER SETTING

If the jumper for MISC1 is set to Y2 the MISC1 screw terminal on the backplate will control a second stage of cooling.

Y2 OPERATION - SECTION 13


Control up to two Cool stages.

The **2nd Stage** of heat or cool is turned on when:

(A) The 1st Stage has been on for the time required (step #23, page 13.6). It is adjustable from 0-60 minutes and the default is two minutes.

And

(B) The temperature spread from the setpoint is equal to or greater than: *the setpoint plus the deadband (step #24, page 13.6), plus the 2nd deadband (step #21, page 13.5)*. This 2nd deadband is adjustable from 0-10 degrees and the default is two degrees.

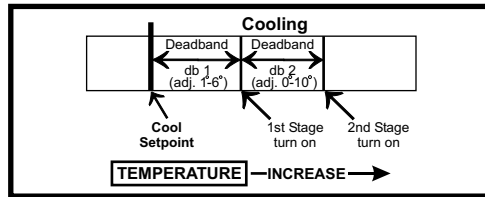

SECTION 18
Factory Defaults, Calibration, and Sensors

TOTALINE

Section 18 Contents:


- *Resetting the Thermostat to the
Factory Default Settings.....18.2*
- *Calibrating the Temperature
and Humidity Sensors.....18.3*


Resetting the Thermostat to the Factory Default Settings (for default values see page 20.1)

If, for any reason, you desire to return all the stored settings back to the factory default settings, follow the instructions below.


WARNING: This will reset all Time Period and Advanced Programming to the default settings. Any information entered prior to this reset may be permanently lost.


1

MODE  Place the thermostat in the OFF mode.

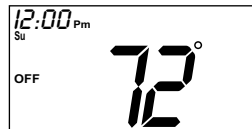


2

MODE  Press and hold the MODE button. While holding the MODE button, press and hold the FAN button for 5 seconds. All icons will appear on the display.


FAN 




3


FAN  After all of the icons appear, release the MODE and FAN buttons. Then press and hold the FAN button for 5 seconds.

18

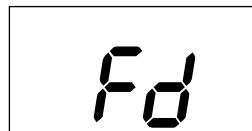

4

 MODE  After the letters Fd appear on the display (Factory Default), release the FAN button. Press the MODE button **once** to return to normal operation.

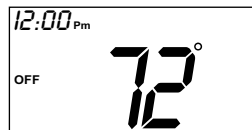


SECTION 19

Accessories

TOTALINE

ACCESSORY PORT - The RJ11 Jack is used to connect the P374-2800 to the IR Receiver P/N P374-0431 for wireless communication or the EZ Programmer P/N P374-0432 for easy downloading or uploading of thermostat information.

 The Accessory Port is located on the bottom of the thermostat.



IR RECEIVER / REMOTE CONTROL (optional accessory) - When the IR Receiver is connected, the thermostat can be controlled using an IR Remote Control. The thermostat may also interface with other wireless systems in your home. For more information see the instruction sheet for the IR Receiver P/N P374-0431.

EZ PROGRAMMER (optional accessory) - When the EZ Programmer is connected, the thermostat Time Period Programming and Advanced Setup Programming can be stored into the EZ Programmer's memory. This information can then be uploaded to other thermostats. For more information see the instruction sheet for the EZ Programmer P/N P374-0432.

WEB KIT (optional accessory) - The P374-2800 Thermostat is capable of communication via the World Wide Web and phone by installing the optional Web Kit. Heating and cooling functionality may be accessed and controlled through the phone or internet. For more information contact your dealer.

SECTION 20

Advanced Setup Table

TOTALINE

Step#	Description	Pg#	Range	Df*	Step#	Description	Pg#	Range	Df*
1	Programmable Thermostat	4.2	Yes/No	Yes	18	Minimum Heat/Cool Differential	13.2	0°- 6°	2°
2	Auto-Changeover Thermostat	4.3	Yes/No	Yes	19	Cycles Per Hour	13.3	d1, d, 2-6	6
3	Fan Off Delay	7.3	0, 30, 60, 90	0	20	Deadband/Temp. Swing 1st Stage	13.5	1°- 6°	2°
4	Thermoglow Backlight	8.2	Auto/On/Off	Auto	21	Deadband/Temp. Swing 2nd Stage	13.5	0°- 10°	2°
5	F or C	8.2	F/C	F	22	Deadband/Temp. Swing 3rd Stage	13.5	0°- 10°	2°
6	Security Level	8.4	0- 3	0	23	Minutes Between Stage 1 & 2	13.6	0-60min	2
7	Max Heat Setpoint	8.4	35°- 99°	80°	24	Minutes Between Stage 2 & 3	13.6	0-60min	2
8	Min Cool Setpoint	8.4	35°- 99°	55°	25	2nd Stage turn off at setpoint	13.7	On/Off	On
9	Cool to Dehumidify	10.4	On/Off	Off	26	Energy Save	14.1	Off/On	Off
10	Maximum Dehum Overshoot	10.4	0°- 5°	3°	27	Reset Service Filter Icon	15.2	--	--
11	DEHUM Terminal Polarity	10.5	NO/NC	NO	28	Service Filter Run Time Set	15.2	0 - 1950	0
12	Override Run-Time	11.2	--	--	29	UV Light Run-Time Set	15.3	0 - 1990	0
13	Reset Service Humidity Icon	11.3	--	--	30	Service Humidify Run-Time Set	15.4	0 - 1990	0
14	Reset UV Light Icon	11.4	--	--					
15	Heatpump Jumper Setting	12.2	--	--					

*Df = Factory Default Setting

**Alarms**

see *Run-Time*

Auto

adjust temperature,
1.4, 4.8
changeover, 4.5, 4.7,
20.1
differential, see
Differential
fan, 7.2
icon, 2.3
lockout, 4.3
mode, 1.3

AuxHeat icon, 2.4**b reversing valve, 12.2****Buttons**

down, 1.2, 2.2, 8.3,
12.4
fan, 1.4, 2.2, 7.2,
12.4, 18.2
front panel, 2.2
humidity, 2.2, 5.3,
8.3, 9.3
Holiday, 2.2, 5.2, 16.1
mode, 1.3, 2.2, 4.2,

8.3, 18.2
outside, 2.2, 5.2
Override, 2.2, 6.6
up, 1.2, 2.2, 8.3,
12.4

**C, 8.2, 20.1****Calibration, 18.3**
Celsius/Centigrade, 8.2**Clock**

display, 2.3
setting, 2.2, 3.2

Compressor Lockout, 13.3**Cool**

1st stage
deadband, see
Deadband
dehum, 10.5
minutes of run-
time, 13.4,
17.5, 20.1
2nd stage
deadband, see
Deadband
dehum, 10.5
minutes of run-
time, 13.4, 17.5,
20.1
turn off

temperature,
13.7, 20.1
Y2 operation, 17.5
deadband, see
Deadband
droop, see *Deadband*
electric/heat pump,
12.2
icon, 2.3
indicator, 2.2
mode, 1.3
overshoot, see
Overshoot
program, see *Program*
run-time, see *Run-Time*
setpoint, 1.3-1.4, 6.2,
6.5
to dehumidify, see
Dehumidify

Copy Function
see *Program***Cycles Per Hour, 13.3, 20.1****Day**

display, 2.3
setting, 1.2, 3.2

Deadband

1st stage, 13.4-13.5,
13.7, 17.5, 20.1
2nd stage, 13.4-13.5,

3rd stage, 13.4-13.5,
13.7, 20.1

Dehumidify

cool to, 10.3, 20.1
DEHUM jumper,
10.5
icon, 2.4
setpoint, 10.2

Delay

fan-off, see *Fan*
time between stages,
see *Time Delay*

Differential

heat and cool, 13.2,
20.1
humidify and
dehumidify, 9.3,
10.2

Disabled Keypad

see *Keypad Lockout*

**EH, 12.4****Electric Heating**

AuxHeat icon, 2.4
jumper setting, 12.3
20.1

**Emergency Heat,
12.4****Energy Save, 14.1****F, 8.2, 20.1****Factory Defaults**

caution, ii
settings, 18.2
resetting, 18.2

Fahrenheit, 8.2**Fan**

button function, see
Buttons
off time delay, 7.3,
20.1
on during heat, see
Electric Heat
on icon, 1.4, 2.4, 7.2
purge, 7.4, 20.1
run-time, 15.2
2nd stage heat, see
Emergency Heat
speed, see

Dehumidify
unoccupied, 7.2

Fd, 18.2**Flashing Selection,
2.2****Gas Furnace**

control the fan, 12.3

jumper, 12.2

Green Indicator, 2.2**Heat**

1st stage
deadband, see
Deadband
emergency heat,
12.4
minutes of run-
time, 13.4, 17.5,
20.1
2nd stage
deadband, see
Deadband
emergency heat,
12.4
electric strip heat,
2.4
minutes of run-
time, 13.4, 17.3,
20.1
3rd stage
deadband, see
Deadband
W3, 17.3
AuxHeat icon, 2.4
deadband, see
Deadband
droop, see *Deadband*
electric/heat pump,

12.2
 icon, 2.3
 indicator, 2.2
 Mode, 1.3
 program, see *Program*
 run-time, see *Run-Time*
 setpoint, 1.3-1.4,
 6.2, 6.5

 
Heat Pump
 AuxHeat, 2.4
 emergency heat,
 12.4
 jumper setting, 12.2

Hi
 icon, 2.4, 5.2
 security setpoint, 8.4
 temperature, 5.2

Holiday
 button, see *Buttons*
 mode, 16.1-16.2
 programming, 16.1-
 16.2
 setpoints, 16.1

Humidify
 icon, 2.4
 service, 11.3, 15.4,
 20.1
 setpoint, 9.3

Humidity Module
 connector, 9.2
 installation, 9.2
 jumper setting, 9.2
 required for, 5.3,



**Internet-based
 Operation,**
 see *Programmable
 Output*

IR Receiver, 19.1
**IR Remote Control,
 19.1**



Jumpers
 DEHUM, 17.3
 ELEC, 12.3
 electric heat, 12.3
 gas electric, 12.2
 heat pump, 12.2,
 20.1
 HUM, 9.2, 17.2-17.3
 reversing valve, 12.2,
 20.1
 W3, 17.3
 Y2, 17.2-17.3



**Keypad Lockout, 2.4,
 8.3**



LCD, 2.2
Locked Indication
 see *Keypad Lockout*

Lo
 icon, 2.4, 5.2
 security setpoint, 8.4
 temperature, 5.2



Manual
 changeover, 4.4, 4.6
 cool, 4.3
 heat, 4.3

**Maximum Outdoor
 Temperature, see Hi**

**Minimum Outdoor
 Temperature,**
 see *Lo*

MISC
 jumper, see *Jumpers*
 output, 17.2-17.3

Mode icon, 1.3, 2.3
**Multi-stage
 Operation, 13.4**



Non-Programmable Thermostat, 4.2, 4.4-4.5

Normally

Open/Closed,
dehum terminal,
10.5



O Reversing Valve, 12.2

Occupied I

daily schedule, see
Program

energy save, 18.1

icon, 1.3

mode, 1.3, 4.6-4.7

override, 6.6

programming, 6.2-6.5

programming
worksheet, back
Page

Off Mode, 1.3, 2.3

Outdoor,

see *Outside*

energy save, 18.1

icon, 1.3

mode, 1.3, 4.6-4.7

override, 6.6

programming, 6.2-6.5

programming
worksheet, back
page

Off Mode, 1.3, 2.3

Outdoor,

see *Outside*

Outside

button, see *Buttons*

icon, 2.3

sensor, 2.3, 5.2

viewing

temperature,

2.3, 5.2

Override

button, see *Buttons*

daily schedule, 6.6

icon, 2.3

timer, 6.6

viewing run-time,

11.2, 20.1

Overshoot, 10.3, 20.1



Program

copy, 6.4-6.5

daily schedule, 6.2-6.5

mode, 1.4, 4.6-4.8

on at all times, 8.4

On icon, 2.3

override, see *Override*

setpoint limits, 8.4

tips, 6.5

worksheet, back page

Programmable

Thermostat, 4.2



Red Indicator, 2.2

Reset

thermostat settings,

see *Factory Defaults*

run-time

fan/filter, 15.2,

20.1

humidify, 15.4,

UV light, 15.3,

20.1

RS2, see Outside

Sensor

Run-Time

resetting, see *Reset*

setting,

humidifier, 15.4,

20.1

service filter, 15.2,

20.1

UV light, 15.3, 20.1

Override, 11.2

UV light, 11.4



Schedule, Daily,
see *Program*

2nd stage turn off temperature,
13.7, 20.1

Security
level, 8.4, 20.1
setpoints, 8.4, 20.1

Sensor
outside, see *Outside thermostat*, see *Thermostat Sensor*

Service
filter icon, see *Reset humidify icon*, see *Reset*
UV light, see *Reset*

Set Clock, see *Clock*

Setpoint
cool, see *Cool dehumidification*, 9.4, 10.3, 10.5
heat, see *Heat holiday*, 16.1
humidification, 5.3, 9.4, 10.3
occupied, 6.2
security, 8.4
unoccupied, 6.2-6.3

Setup Icon, 2.4

Simplest Operation,

4.2-4.3



Terminal, MISC, see *MISC*

Thermostat Sensor
calibrate, 22.3

Time, see *Clock*

Time Delay,
compressor lockout, 13.3
cycles per hour, 13.3, 20.1
1st to 2nd stage, 13.6, 20.1
2nd to 3rd stage, 13.6, 20.1

Time Schedule, see *Program*



Unoccupied
icon, 2.3
operation, 6.5
override, see *Override setpoint*, 6.2-6.3

UV Light
icon, 2.4

resetting, see *Reset run-time*, see *Run-Time*
setting, see *Run-Time*



Warranty, 22.1

Section 22 Warranty

TOTALINE

One-Year Warranty - This Product is warranted to be free from defects in material and workmanship. If it appears within one year from the date of original installation, whether or not actual use begins on that date, that the product does not meet this warranty, a new or remanufactured part, at the manufacturer's sole option to replace any defective part, will be provided without charge for the part itself provided the defective part is returned to the distributor through a qualified servicing dealer.

THIS WARRANTY DOES NOT INCLUDE LABOR OR OTHER COSTS incurred for diagnosing, repairing, removing, installing, shipping, servicing or handling of either defective parts or replacement parts. Such costs may be covered by a separate warranty provided by the installer.

THIS WARRANTY APPLIES ONLY TO PRODUCTS IN THEIR ORIGINAL INSTALLATION LOCATION AND BECOMES VOID UPON REINSTALLATION.

LIMITATIONS OF WARRANTIES – ALL IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY) ARE HEREBY LIMITED IN DURATION TO THE PERIOD FOR WHICH THE LIMITED WARRANTY IS GIVEN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE MAY NOT APPLY TO YOU. THE EXPRESSED WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED, ENLARGED, OR CHANGED BY ANY DISTRIBUTOR, DEALER, OR OTHER PERSON WHATSOEVER.

ALL WORK UNDER THE TERMS OF THIS WARRANTY SHALL BE PERFORMED DURING NORMAL WORKING HOURS. ALL REPLACEMENT PARTS, WHETHER NEW OR REMANUFACTURED, ASSUME AS THEIR WARRANTY PERIOD ONLY THE REMAINING TIME PERIOD OF THIS WARRANTY.

THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR:

1. Normal maintenance as outlined in the installation and servicing instructions or owner's manual, including filter cleaning and/or replacement and lubrication.
2. Damage or repairs required as a consequence of faulty installation, misapplication, abuse, improper servicing, unauthorized alteration or improper operation.
3. Failure to start due to voltage conditions, blown fuses, open circuit breakers or other damages due to the inadequacy or interruption of electrical service.
4. Damage as a result of floods, winds, fires, lightning, accidents, corrosive environments or other conditions beyond the control of the Manufacturer.
5. Parts not supplied or designated by the Manufacturer, or damages resulting from their use.
6. Manufacturer products installed outside the continental U.S.A., Alaska, Hawaii, and Canada.
7. Electricity or fuel costs or increases in electricity or fuel costs for any reason whatsoever including additional or unusual use of supplemental electric heat.
8. ANY SPECIAL INDIRECT OR CONSEQUENTIAL PROPERTY OR COMMERCIAL DAMAGE OF ANY NATURE WHATSOEVER. Some states do not allow the exclusion of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

Programming Worksheet

see Section 6

DAY	PERIOD	START TIME	COOL	HEAT	
MONDAY	Unoccupied				
	Occupied 1				
	Occupied 2				
	Occupied 3				
TUESDAY	Unoccupied				<i>Copy Mon → Tue</i>
	Occupied 1				<input type="checkbox"/> No
	Occupied 2				<input type="checkbox"/> Yes
	Occupied 3				
WEDNESDAY	Unoccupied				<i>Copy Tue → Wed</i>
	Occupied 1				<input type="checkbox"/> No
	Occupied 2				<input type="checkbox"/> Yes
	Occupied 3				
THURSDAY	Unoccupied				<i>Copy Wed → Thu</i>
	Occupied 1				<input type="checkbox"/> No
	Occupied 2				<input type="checkbox"/> Yes
	Occupied 3				
FRIDAY	Unoccupied				<i>Copy Thu → Fri</i>
	Occupied 1				<input type="checkbox"/> No
	Occupied 2				<input type="checkbox"/> Yes
	Occupied 3				
SATURDAY	Unoccupied				<i>Copy Fri → Sat</i>
	Occupied 1				<input type="checkbox"/> No
	Occupied 2				<input type="checkbox"/> Yes
	Occupied 3				
SUNDAY	Unoccupied				<i>Copy Sat → Sun</i>
	Occupied 1				<input type="checkbox"/> No
	Occupied 2				<input type="checkbox"/> Yes
	Occupied 3				