


## CONTROLS AND SWITCHES

### TOTALINE® CONTROLS AND SWITCHES — HRV/ERV

#### P707-EDF2 Intellitex 2M (Override, Standby or Continuous)

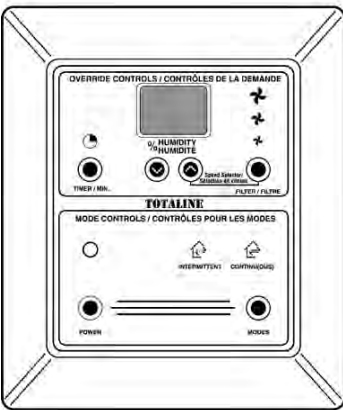

**P4442A**

Control multiple functions of your HRV/ERV with one Slimline wall control. Two-wire connection simplifies installation. Use one P707-EDF2 per HRV/ERV installed.

- Digital Display shows indoor humidity level.
- Dehumidistat Control — A dehumidistat is ideal for use in energy efficient houses where indoor humidity (during the heating season) is higher than outdoor levels. High humidity is a major cause of structure damage and IAQ problems such as mold and mildew.
- Override Timer — When pressed, unit will provide high speed ventilation for one 15-minute period.
- Maintenance Light — Light comes on when it is time to clean unit.
- Power — On/Off.
- Modes — Select Intermittent or Continuous Ventilation Modes.
- Mode Speed — Set Unit to Low, Medium, or High Speed.


#### P707-RTS2 20-Minute, Pushbutton Timer (LED)



**P4441**

20-Minute timer with LED light for use with Totaline Heat Recovery and Energy Recovery Ventilators. Works as an override switch to turn HRV or ERV on high speed for 20 minutes. Up to four timers can be used. Install in bathrooms, kitchen or laundry — wherever easy access wall control is needed.

#### P707-MDEH1 2-Wire Mechanical Low-Voltage Dehumidistat

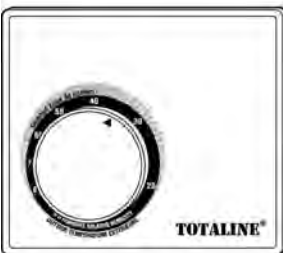

**P4440**

- Two-wire low voltage dehumidistat control with rotary dial. Just turn the dial to set the humidity level.
- Multiple units can be used with Totaline. Install in bathrooms, kitchen or laundry for easy access.